

RF 7000 Setup

LCD Display Setup

Power Unit on.

Press ENTER/YES.

Select 2. – Setup

From RF Terminal Setup Menu:

Select LCD Settings.....7

Set 4/6 Line Legacy Mode to 6 by pressing 1 twice.

Select 0

Bar Code Setup

From RF Terminal Setup Menu:

Select Bar Code Options....2

From Bar Code Setup Menu:

Select UPC-A EAN 13....2

From UPC-A/EAN-13 Options Menu:

Press 4 to change UPC-A Check from ON to OFF.

Select 0 to return to From Bar Code Setup Menu.

Select UPC-E EAN 8....3

Press 5 to change UPC-E Expand Trans from OFF to ON.

Select 0

Select 0 to Exit.

Select 0 to Exit.

Your Worthdata 701 series Terminal is now programmed to work with JPOS.